




plugged water level sensor

Connection of the water level sensor with the motherboard

Please note that the motherboard can differ depending on the MC version.



Unplugged water level sensor

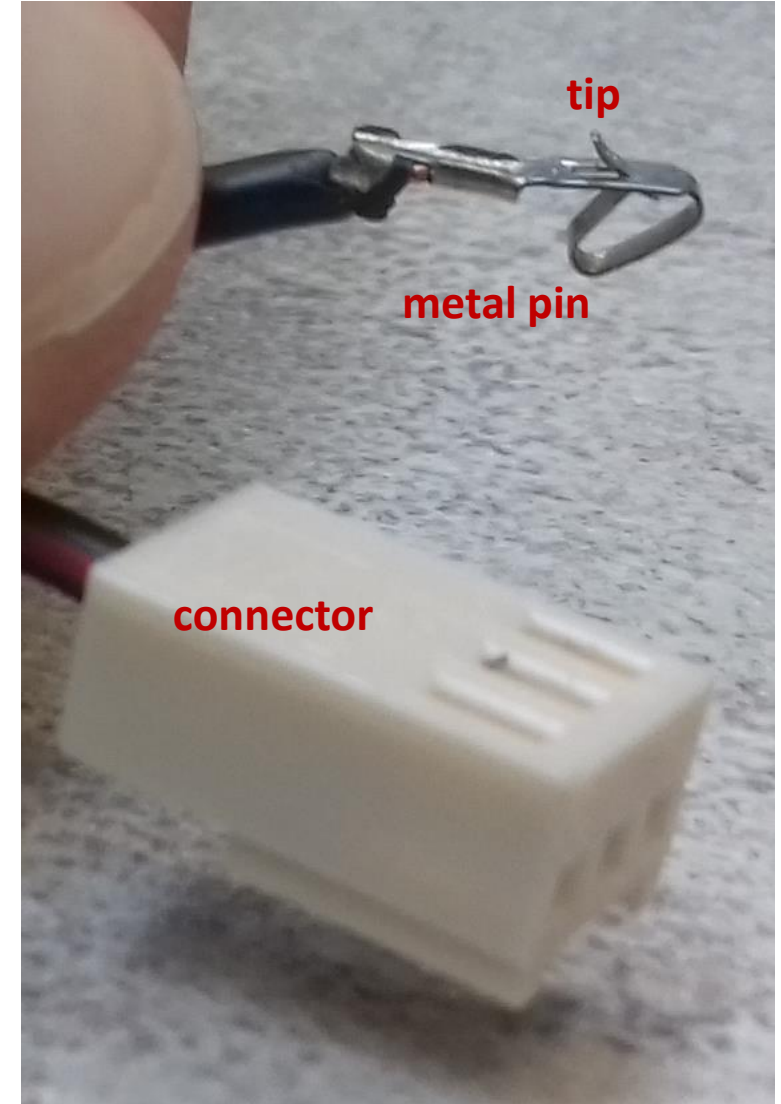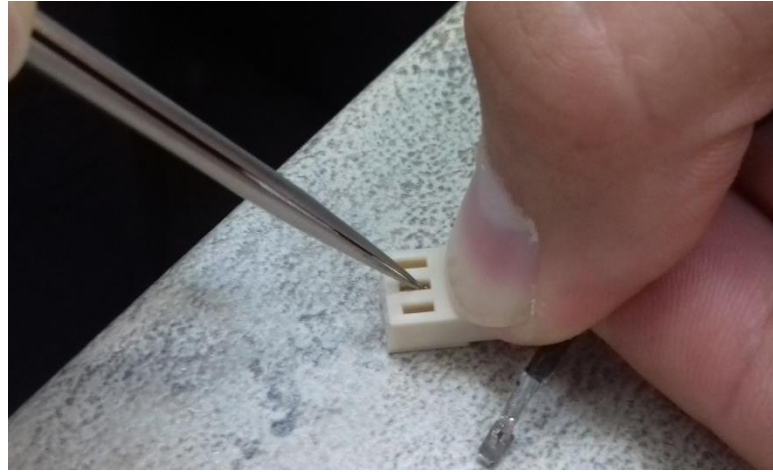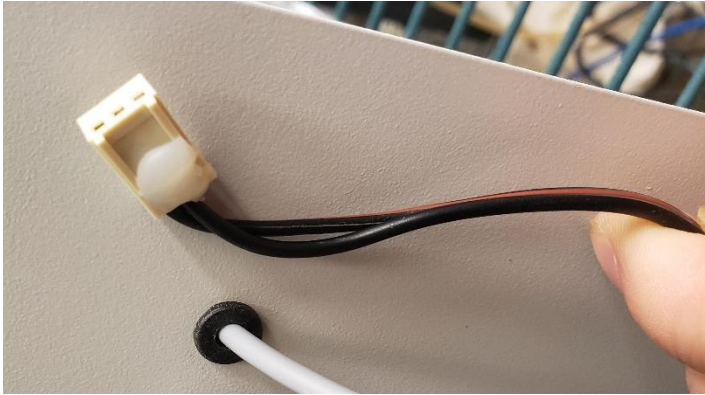

Replacement of the water level sensor:

Disconnect the old water level sensor from the motherboard. Remove the white glue with a rounded blade carefully (image 1).

Pull out the wire from the connector: push the small tip down and pull out the wire from the connector simultaneously (image 2).

Pull out the entire cable without the connector through the hole in the rear side of the Multi-Cultivator.

Replace the water level sensor. Pull the new sensor's cable without the connector through the hole.

Insert the wire in the connector: lift up the tip of the metal pin a little if necessary to ensure the wire won't be released (image 3).

Connect the water level sensor's connector to the motherboard.