


How to Change Spare Fastener Kit for LMS/LMM

Environmental Measurement Japan



Package Lists

Hummer Head Spare Fastener Kit for LMS

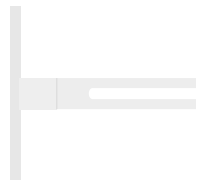

Hummer Head



Fastener Part
Screw Length(M4×4)




Small screws



Cable tie



Ept sealer

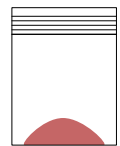

Screw locking adhesive

Arrow Head Spare Fastener Kit for LMM



Hummer Head



Fastener Part
Screw Length(M4×5)




Small screws



Cable tie



Ept sealer

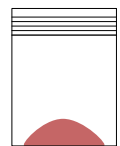

Screw locking adhesive

How to Change Spare Fastener Kit for LMS/LMM

Environmental Measurement Japan


注意:

ネジの長さが異なる為、LMSハンマーヘッド固定ネジをLMMアローヘッド固定用ネジとして再利用するのはお止め下さい。



Assemble Steps

本マニュアルでは、LMSをLMMに変更する時を例に説明しておりますが、LMMをLMSに変更する時も同じ交換方法となりますので説明は省略させていただきます。

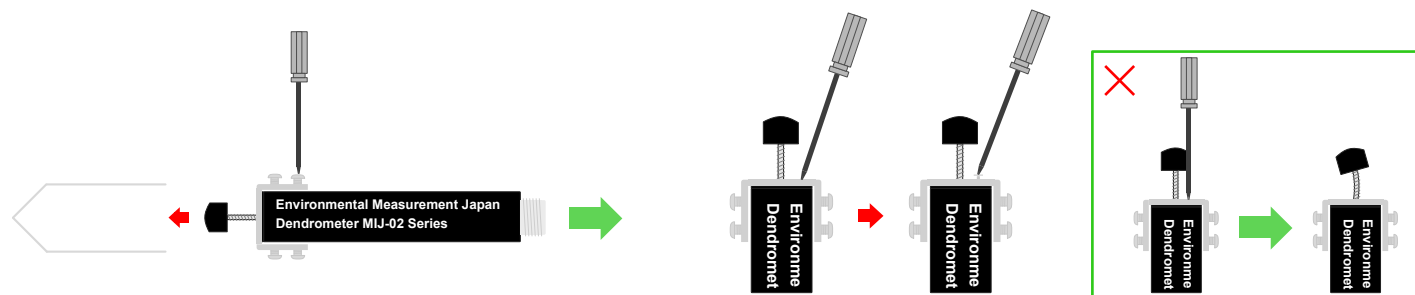

1. ハンマーヘッドを本体から外します。

2. 次にヘッド固定部品を本体から外します。
プラスドライバーを斜めにしてネジを外してください。ドライバーを垂直に入れて外そうとすると、コンタクトヘッドが干渉してしまうのでポテンシオの軸が曲がってしまいます。



3. 固定部品を本体から外して付属の小ネジの先端にネジロック剤を付けます。

4. ネジロック剤を付けたネジを使ってLMMのヘッド固定部品を取り付けます。
* Step2と同様にドライバーの使い方に注意して下さい。



5. LMMのアローヘッドを装着して完了です。